

Repair Parts Listing

 
Ultrasonic Version "C" Cleaners

Item No.	Description	Model 5	Model 14		
		120	100	120	220/240
1	Heater Switch	9306039	9306039	9306039	9306039
2	PCB Control	R9493740	R9493607	R9493035	R9493802
2	PCB Control (220V)				
3	Tank Assy	9493773	9493789	9493173	9493172
3	Tank Assy (As of 1/1/97)				9493173
4	Timer		9306036	9306036	9306036
5	Timer Knob		9355024	9355024	9355024
6	Drain Kit				
7	Thermal Cut Off				
8	EMI Filter		9320074	9320074	9320074
9	Transformer				
10	Heater Assy		9357031	9357031	9357040
10	Heater Assy (As of 1/1/97)				9493935




Item No.	Description	Model 19			Model 28		
		100	120	220/240	100	120	220/240
1	Heater Switch	9306039	9306039	9306039	9306039	9306039	9306039
2	PCB Control	R9493607	R9493035	R9493802	R9493037	R9493036	R9493803
2	PCB Control (220V)						R9493804
3	Tank Assy	9493790	9493175	9493174	9493164	9493165	9493165
3	Tank Assy (As of 1/1/97)			9493175			9493165
4	Timer	9306036	9306036	9306036	9306036	9306036	9306036
5	Timer Knob	9355024	9355024	9355024	9355024	9355024	9355024
6	Drain Kit						
7	Thermal Cut Off				9306035	9306035	9306035
8	EMI Filter	9320074	9320074	9320074	9320074	9320074	9320074
9	Transformer			9492288			9493099
10	Heater Assy	9357031	9357040				
10	Heater Assy (As of 1/1/97)			9493935			9493936

Item No.	Description	Model 57			Model 104		
		100	120	220/240	100	120	220/240
1	Heater Switch	9306039	9306039	9306039	9306039	9306039	9306039
2	PCB Control	R9493242	R9493241	R9493805	R9493037	R9493036	R9493803
2	PCB Control (220V)			R9493806			R9493804
3	Tank Assy	9493290	9493291	9493291	9493292	9493293	9493293
3	Tank Assy (As of 1/1/97)						
4	Timer	9306036	9306036	9306036	9306036	9306036	9306036
5	Timer Knob	9355024	9355024	9355024	9355024	9355024	9355024
6	Drain Kit				9493294	9493294	9493294
7	Thermal Cut Off	9306035	9306035	9306035	9306035	9306035	9306035
8	EMI Filter	9320074	9320074	9320074	9320074	9320074	9320074
9	Transformer						9492798
10	Heater Assy	9357095	9357095	9493937	9357096	9357096	9493938
10	Heater Assy (As of 1/1/97)						





Item No.	Description	Model 136			Model 208			
		100	120	220/240	100	120	230	
1	Heater Switch	9306039	9306039	9306039	9306039	9306039	9306039	
2	PCB Control	R9493775	R9493775	R9493775	R9493281	R9493281	R9493281	
2	PCB Control (220V)							
3	Tank Assy	9493774	9493774	9493774	9493774	9493774	9493774	
3	Tank Assy (As of 1/1/97)							
4	Timer	9306036	9306036	9306036	9306036	9306036	9306036	
5	Timer Knob	9355024	9355024	9355024	9355024	9355024	9355024	
6	Drain Kit	9493294	9493294	9493294	9493294	9493294	9493294	
7	Thermal Cut Off	9306035	9306035	9306035	9306035	9306035	9306035	
8	EMI Filter	9320074	9320074	9320074	9320074	9320074	9320074	
9	Transformer			9492798			9492798	
10	Heater Assy	9357096	9357096	9493936	9357096	9357096	9493936	W/O Heater Swtich
10	Heater Assy (As of 1/1/97)						9493787	9357114



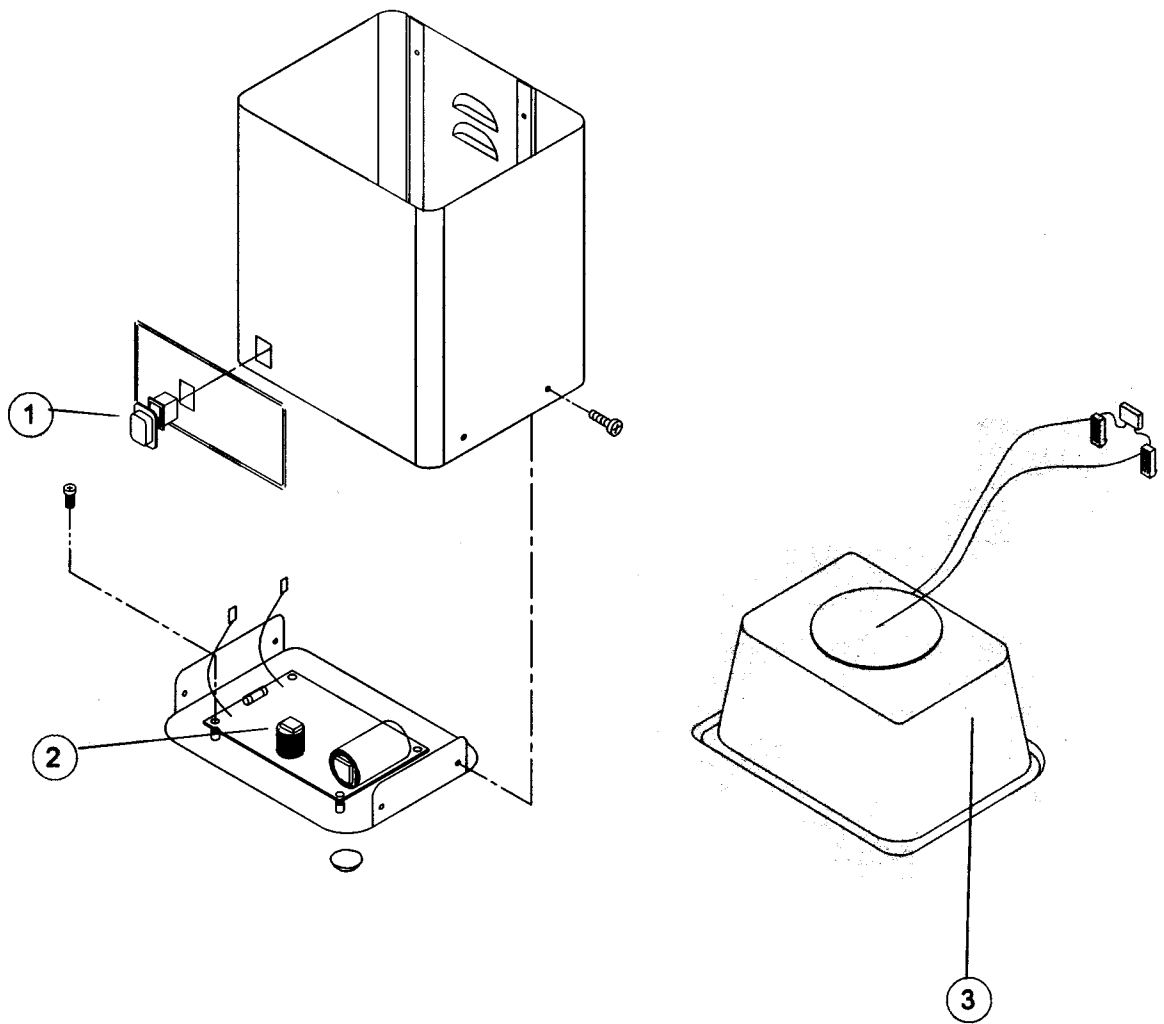




Model 14

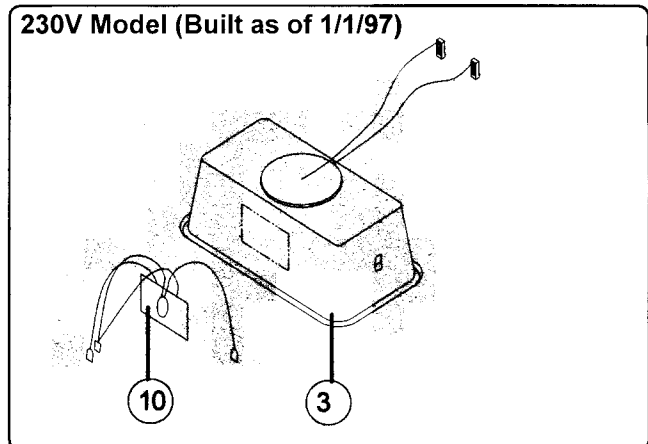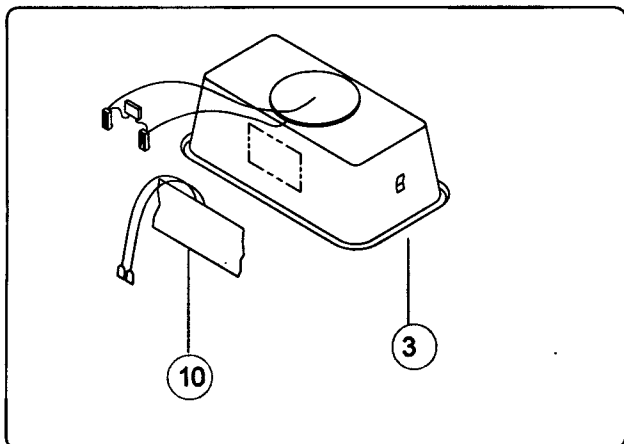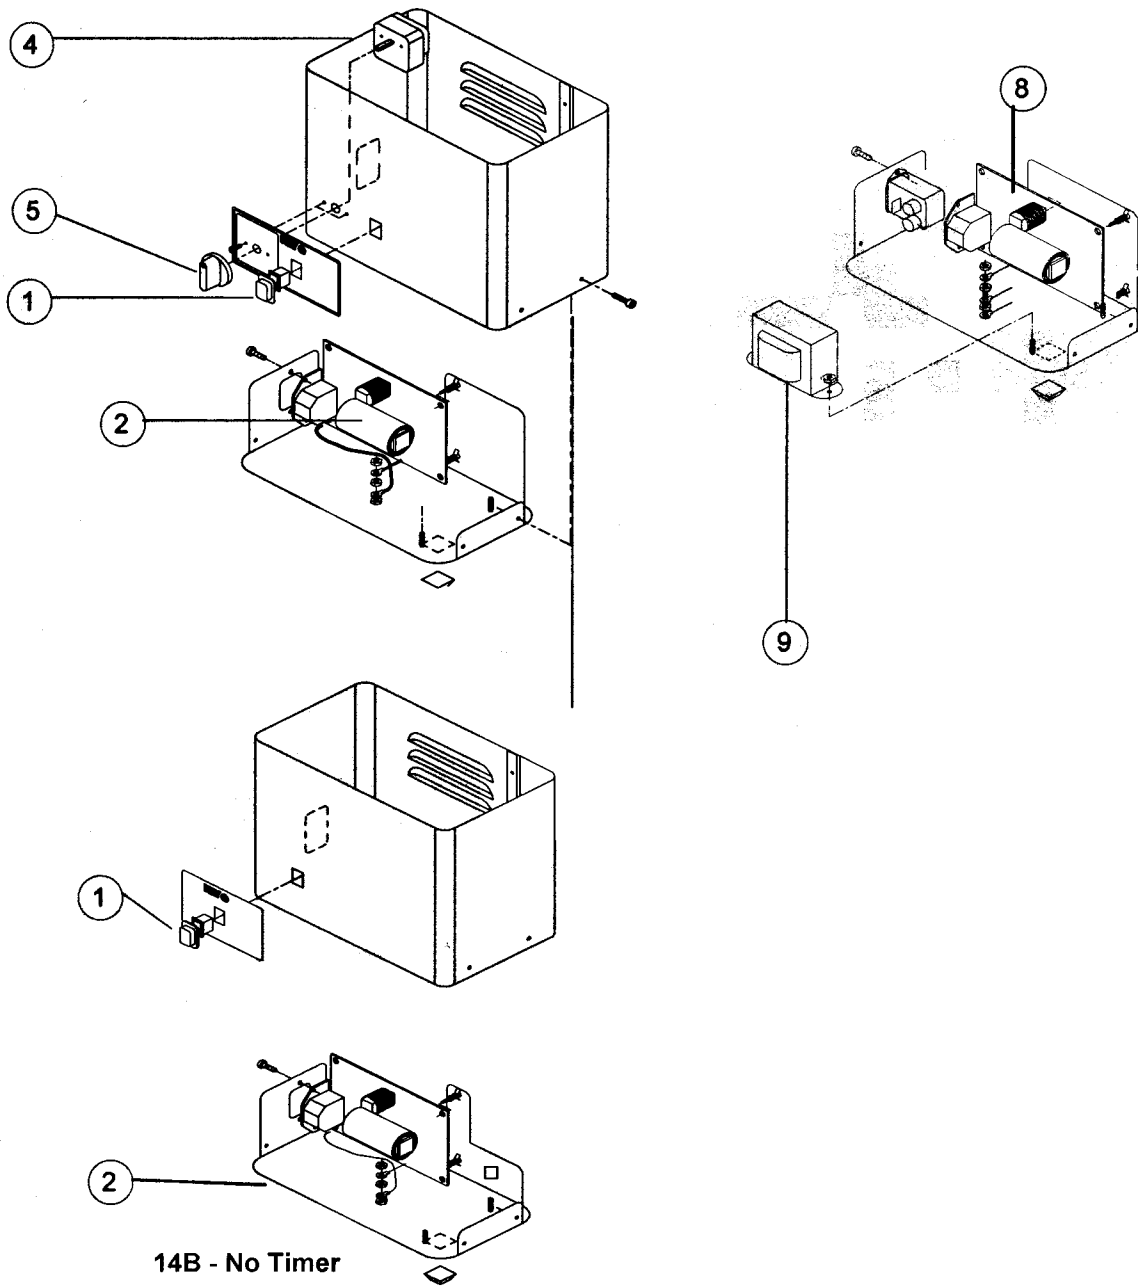   


Model 19

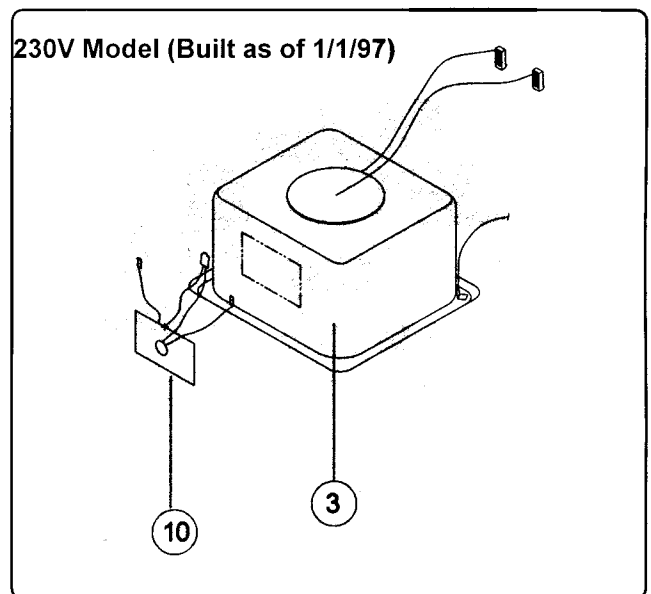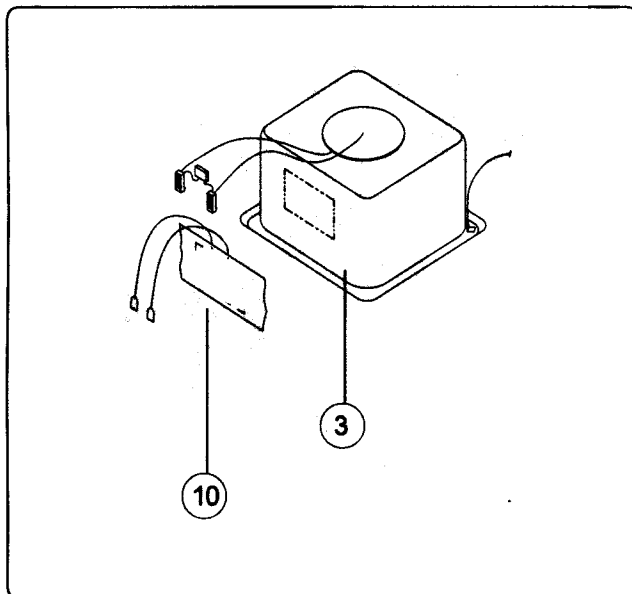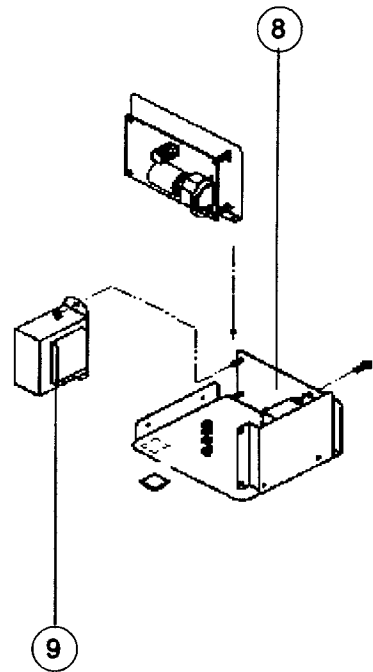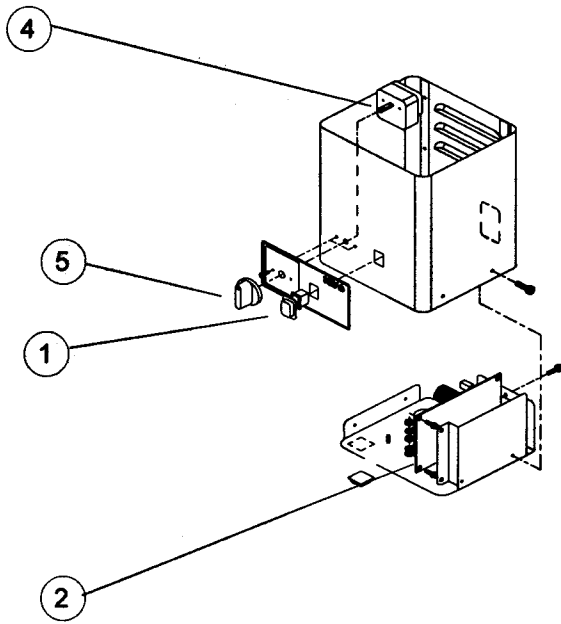    


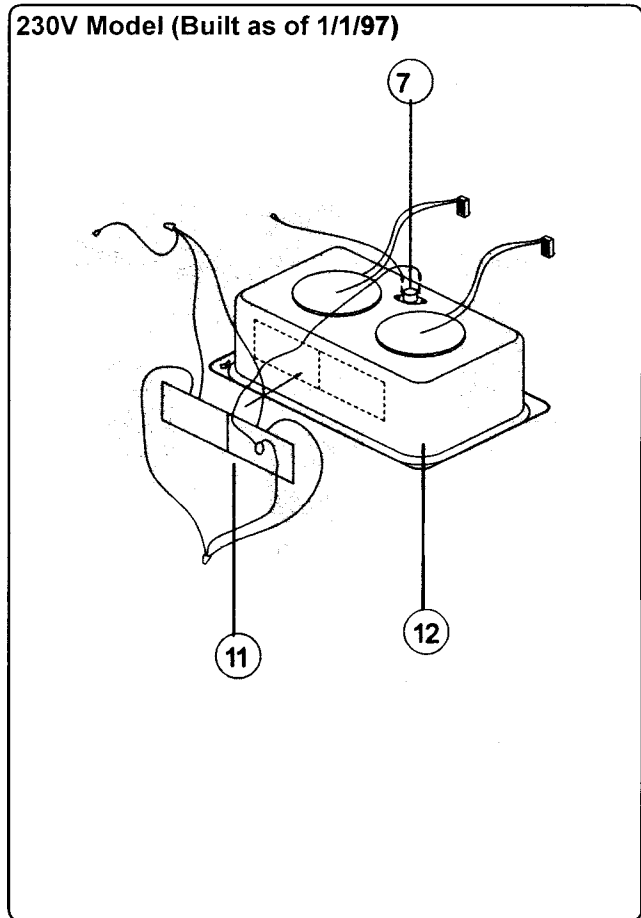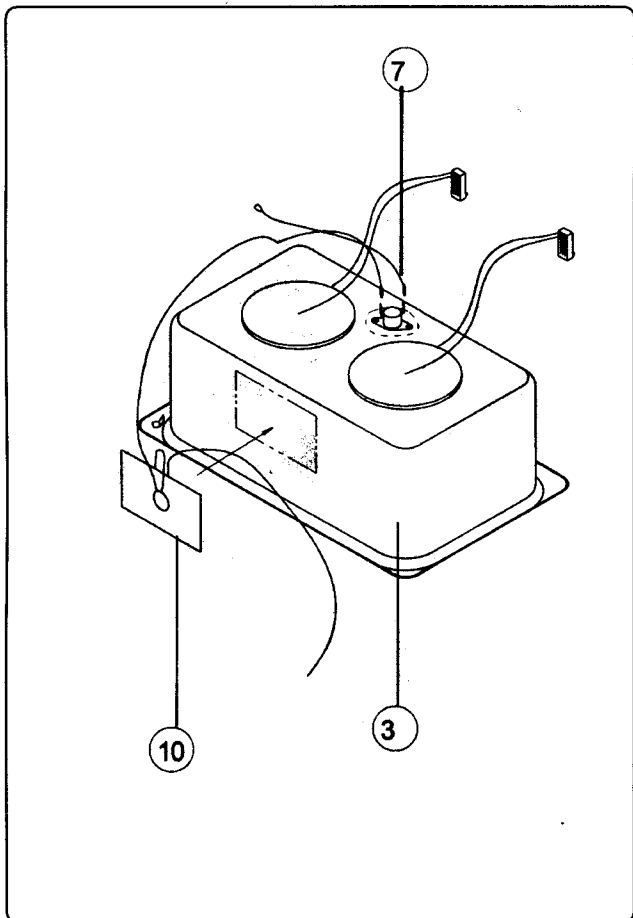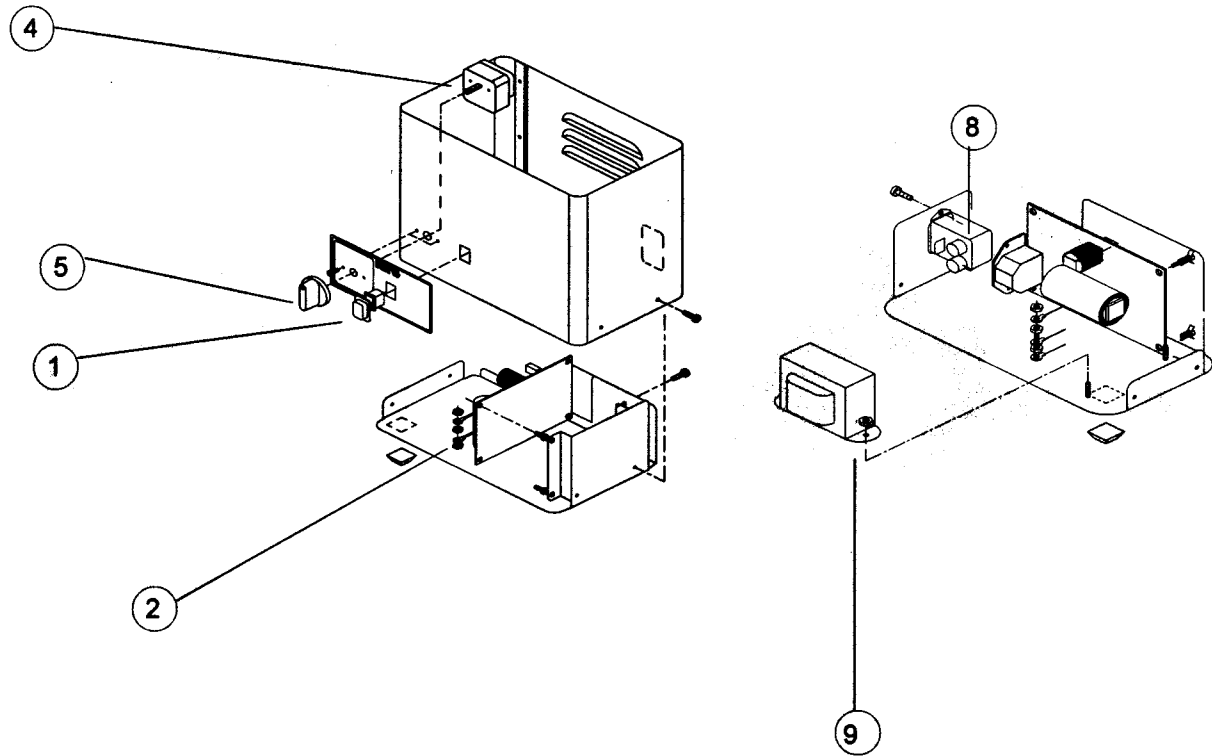   


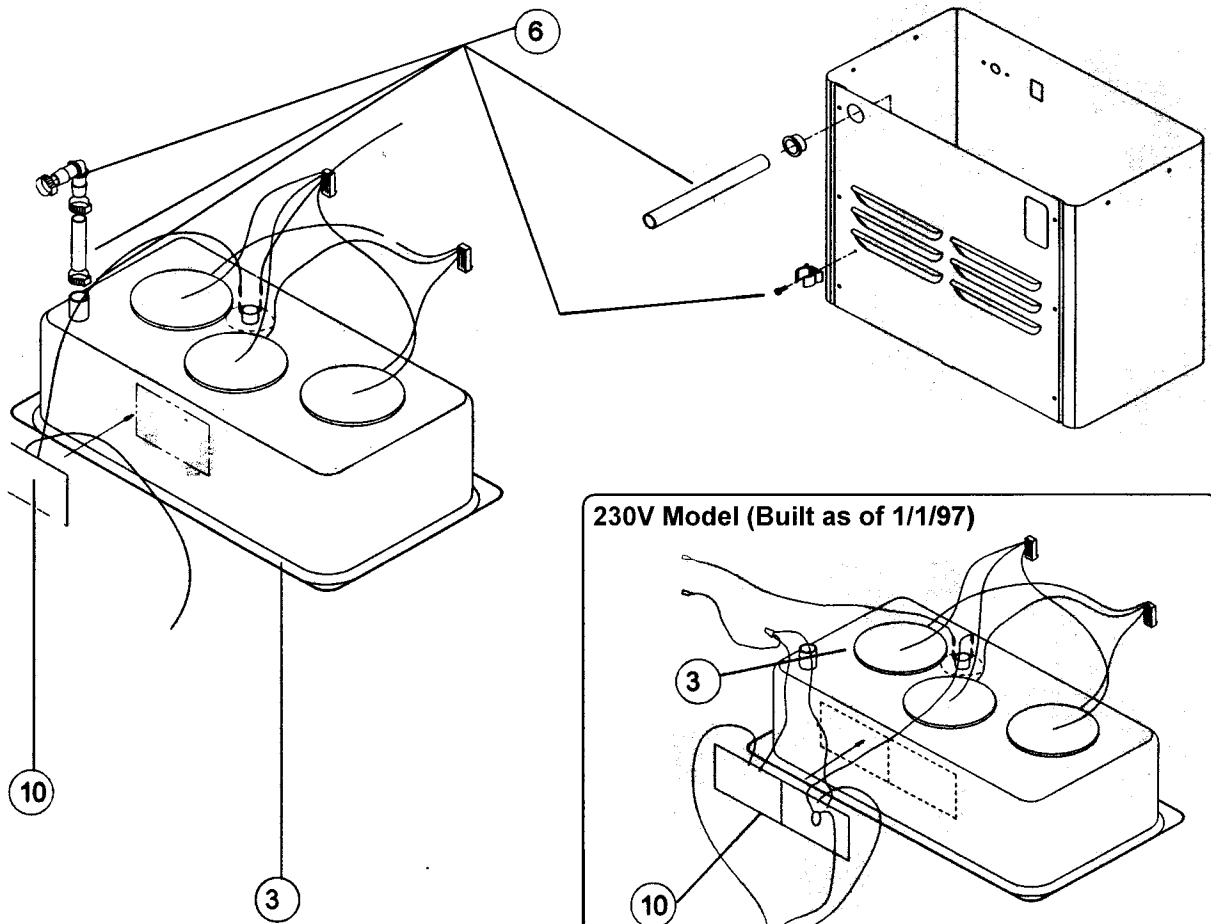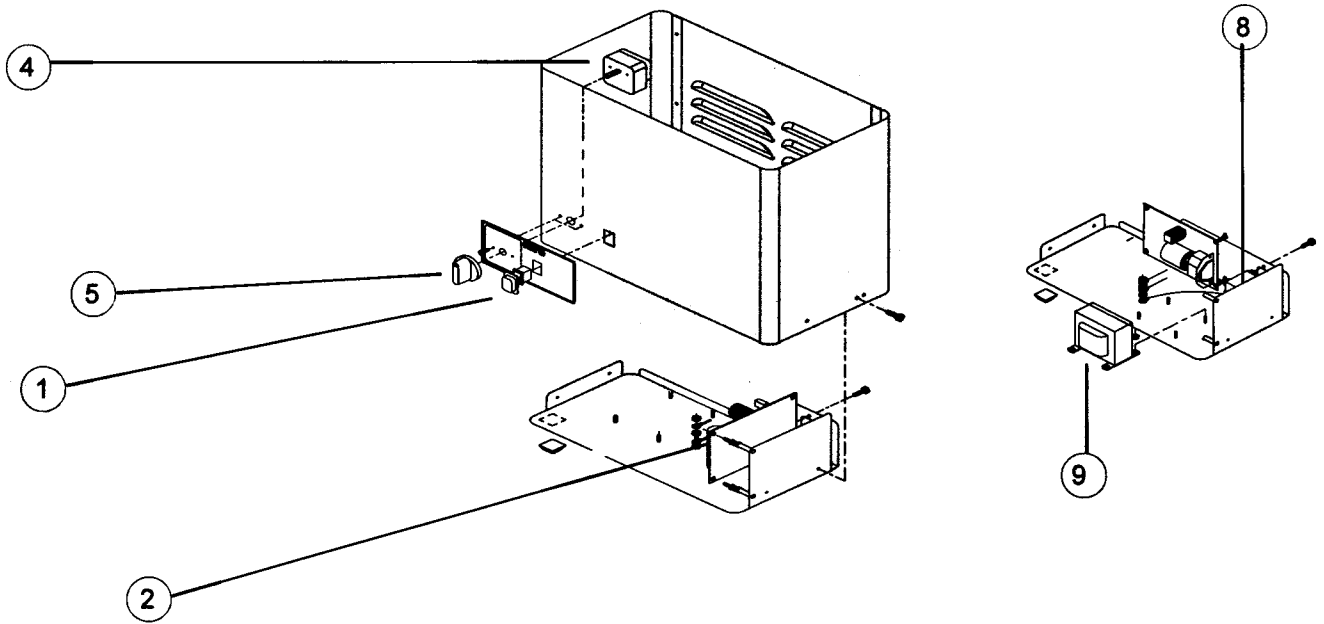  

Model 104

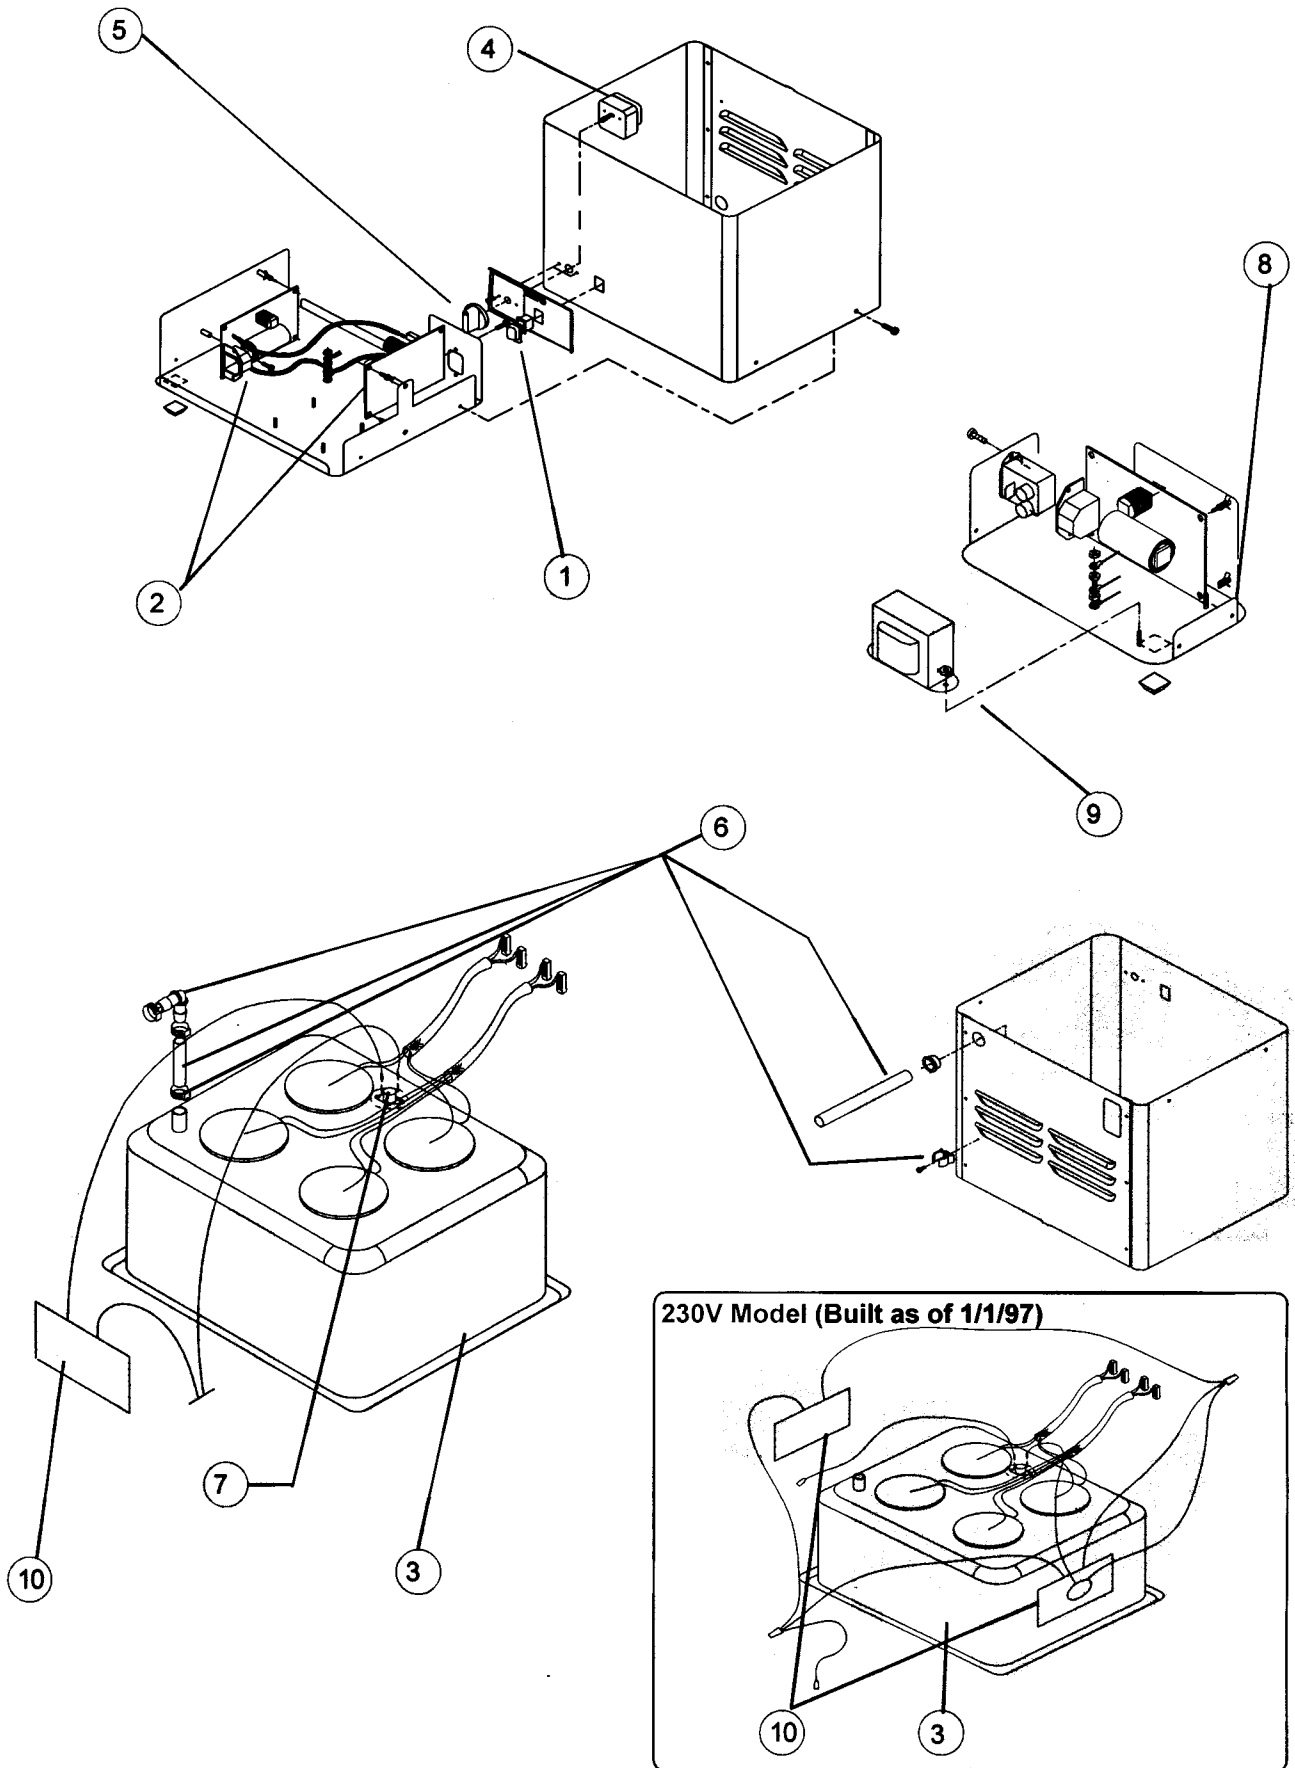 

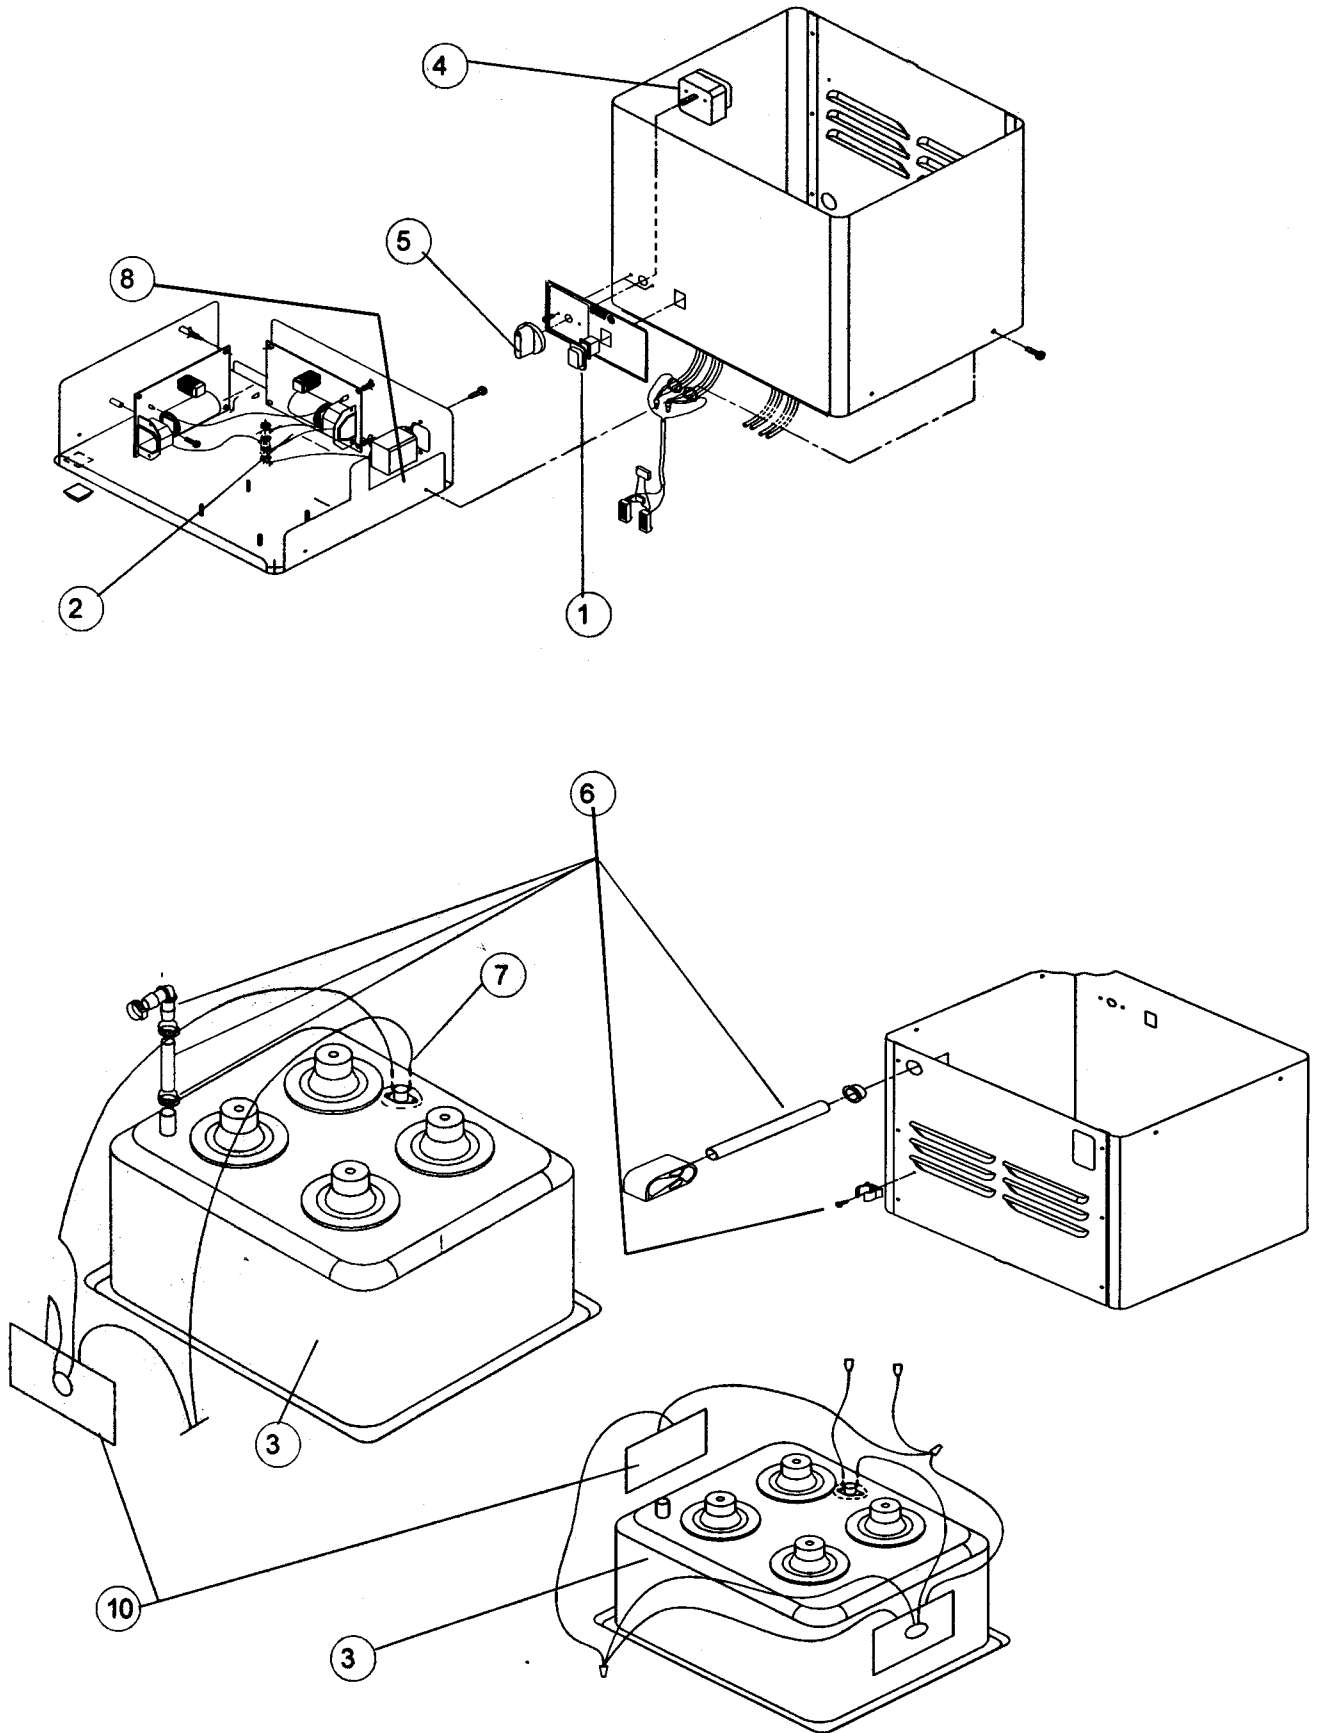 

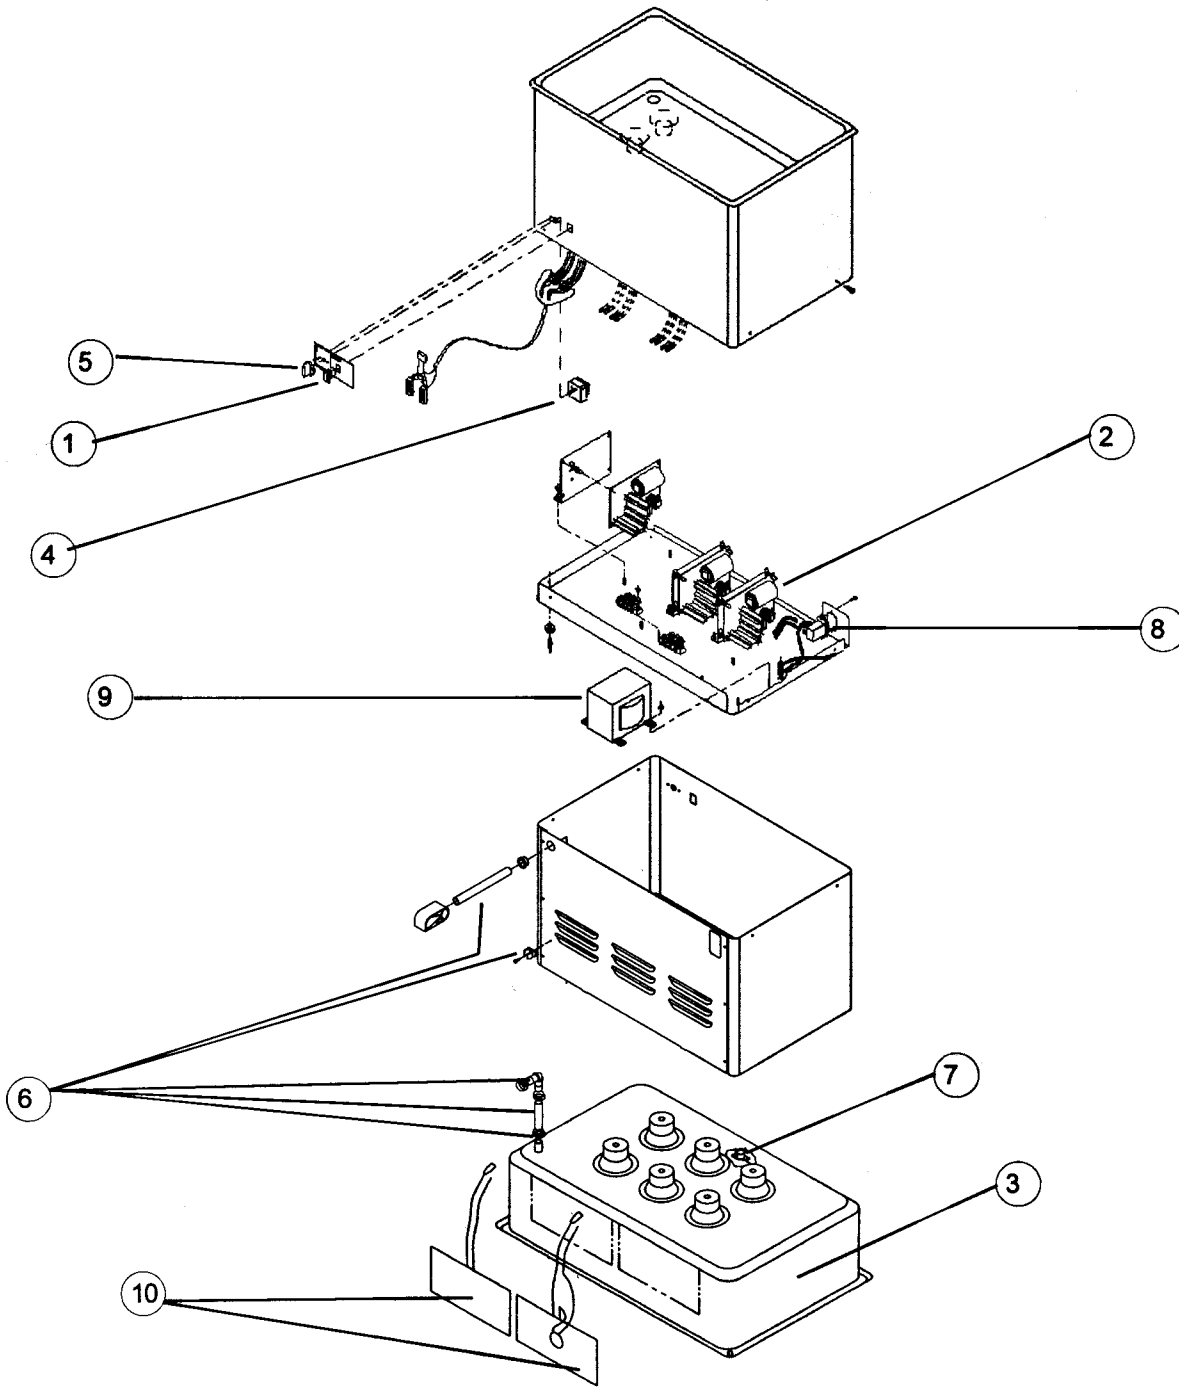 

230V Model (Built as of 1/1/97)

